
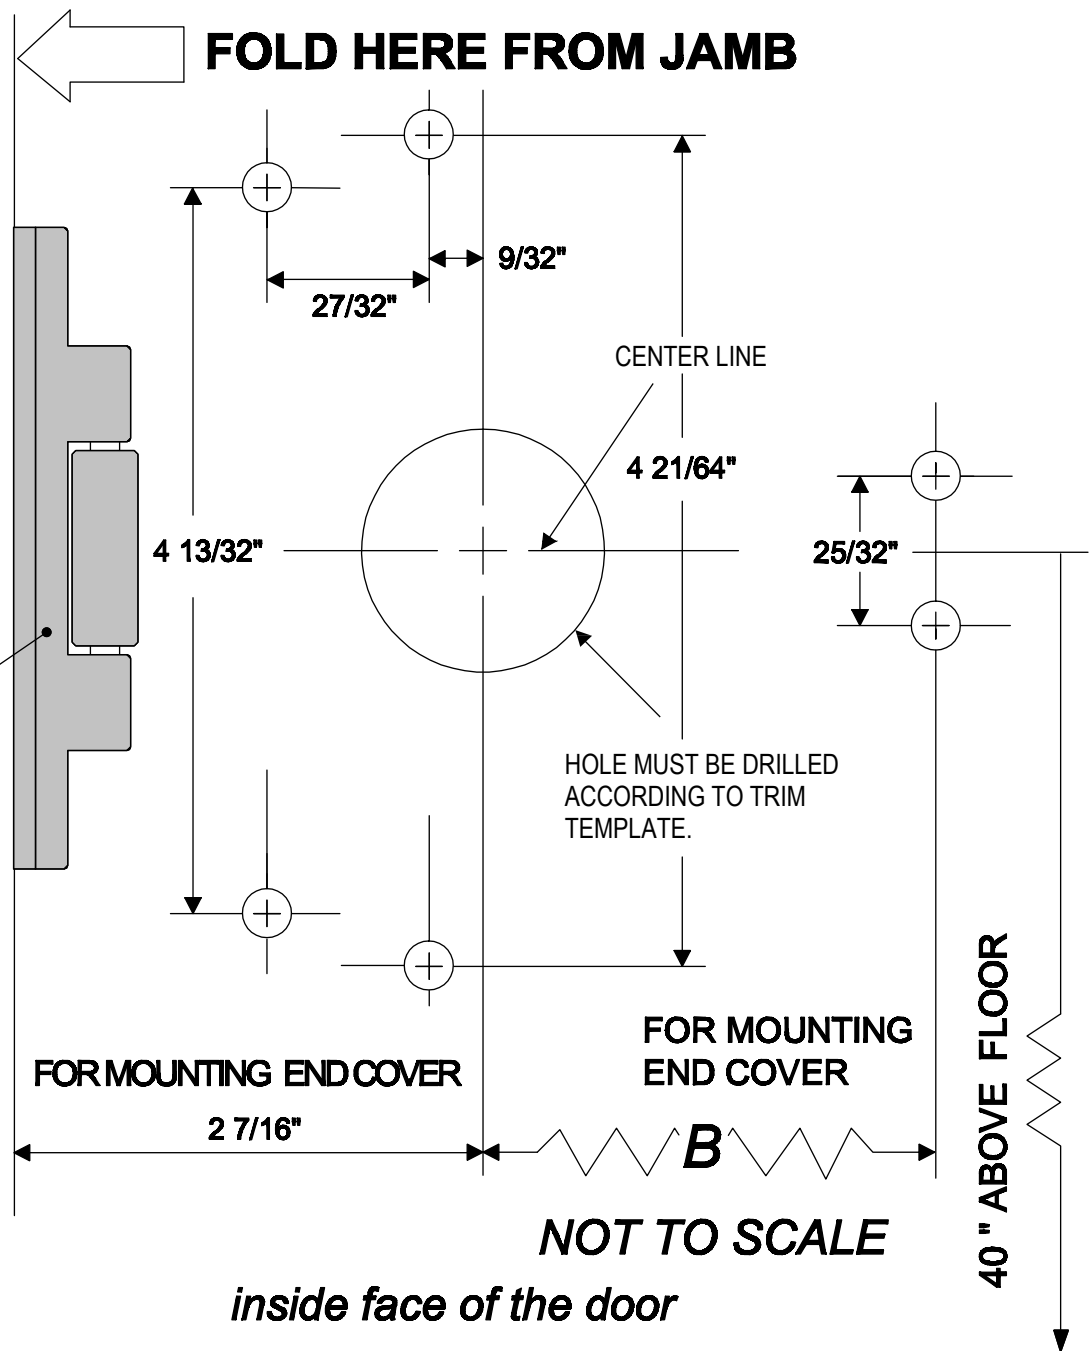


TEMPLATE FOR INSTALLING PANIC EXIT DEVICE

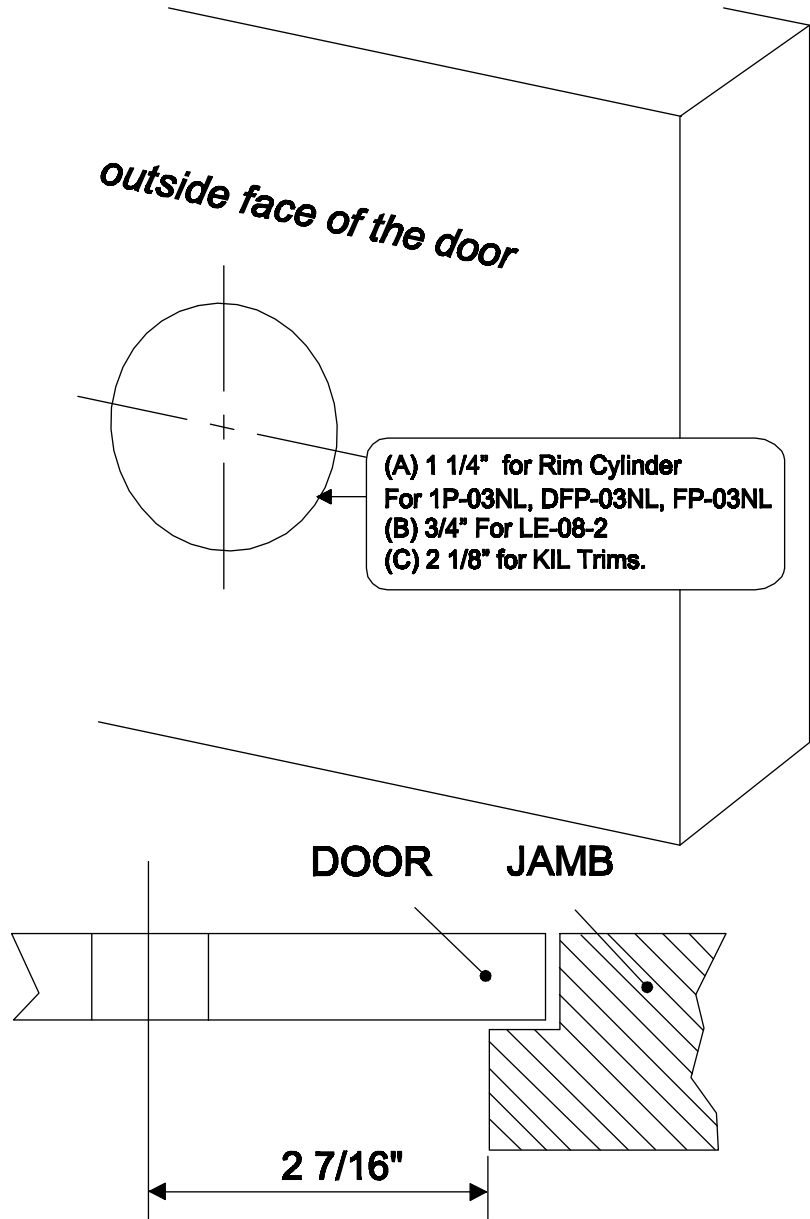

- (A) For 2000R Series (UL Listed)-Drill & tap for (6) 1/4"x20 machine screws for Exit Device and Drill & tap for (3) 1/4"x20 machine screws for Roller Strike
OPTIONAL for 2000R (UL Listed)
Drill (6) 7/32" Pilot Holes for Self Tapping machine screws or wood screws for Exit Device and
Drill (3) 7/32" Pilot Holes for Self Tapping machine screws or wood screws for Roller Strike
- (B) For F2000R (Fire Rated)-Drill 9/32" holes inside and 3/8" holes outside for the (6) thru bolts and drill & tap for (3) 1/4"x20 machine screws for Roller Strike.